



Mega Bass Trap VMT

Installation Manual

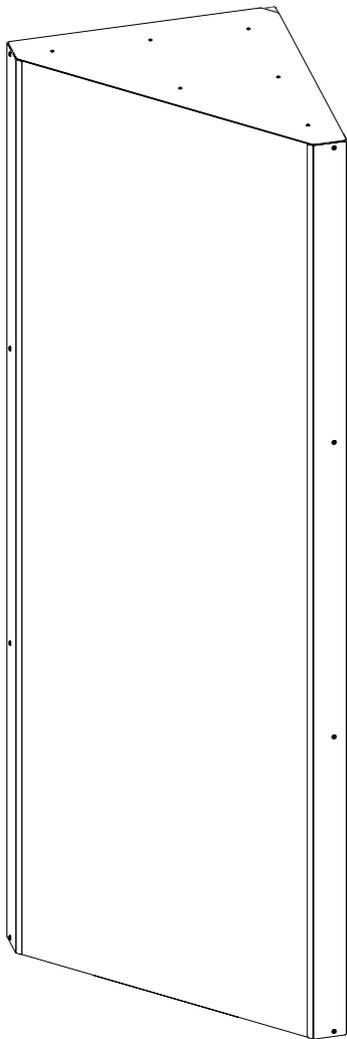


✓ MATERIAL NEEDED


Included

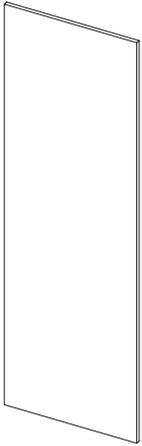


FlatPanel VMT x2

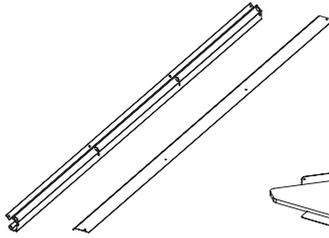

Profile x4 Finishing Profile x4

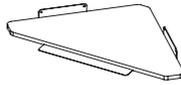

Base x2

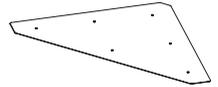

Cover x2



Protection Bar x8




Screws x16




Screws x16



Cover Bracket x2

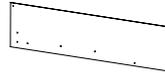


Gauge L x1
Gauge R x1

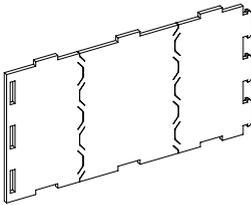

PET Filling x6

Not Included

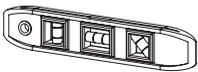


Level



Measuring Tape



Drill

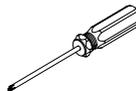

Screwdriver



Pencil




Wall Plugs and Screws


1





Use the gauge L provided to mark the holes for fixing the left profile, according to the left profile, according to the diagrams.

Gauge L

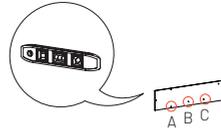**2****3**D
E**4**


E

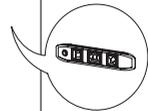

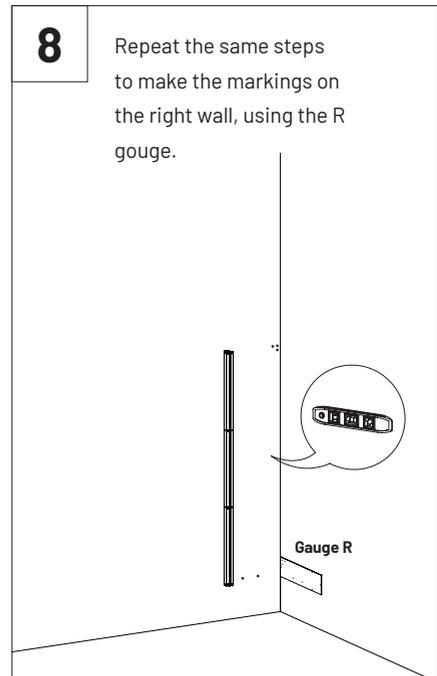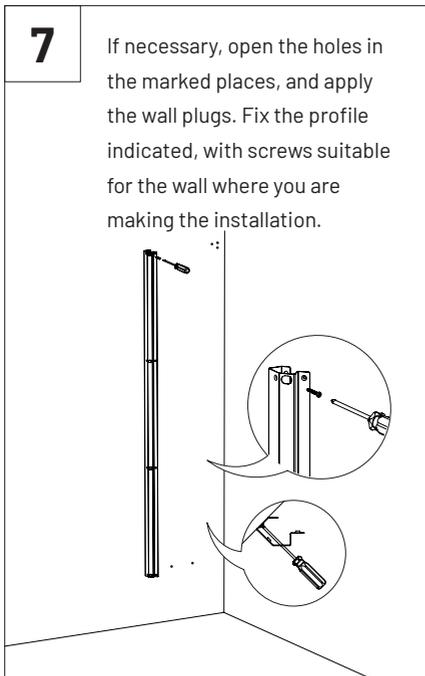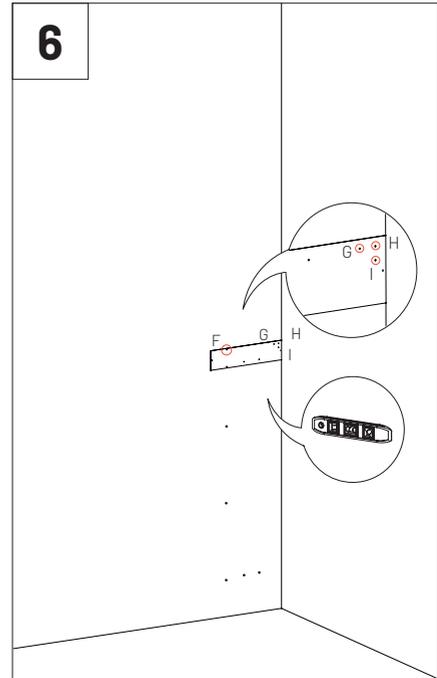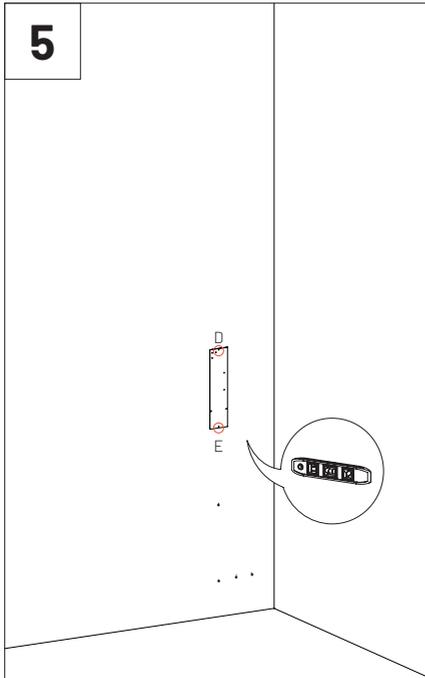


9


After installing the second profile, fix the protection bars with the metallic screws provided.

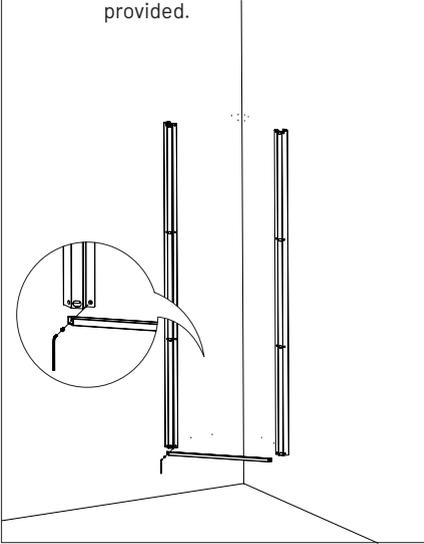
**10**





If necessary, open the holes in the marked places and apply the wall plugs. Fix the Bass Trap base beneath the profiles with screws suitable for the wall where you are making the installation.

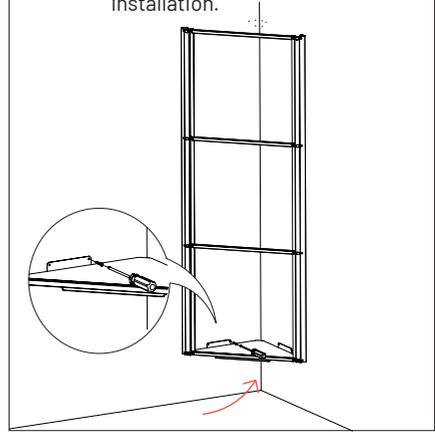**11**

Fix the cover bracket, with screws suitable for the wall where you are making the installation.


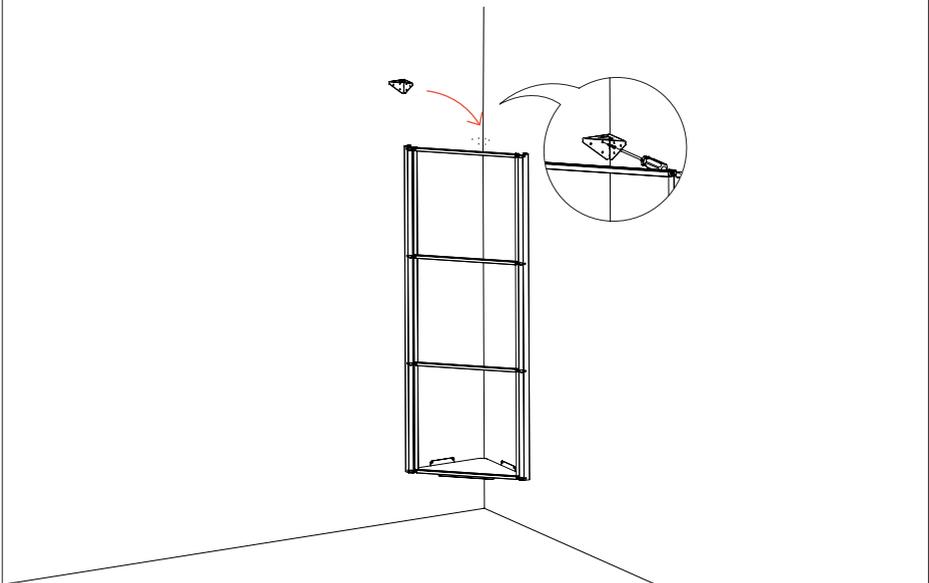


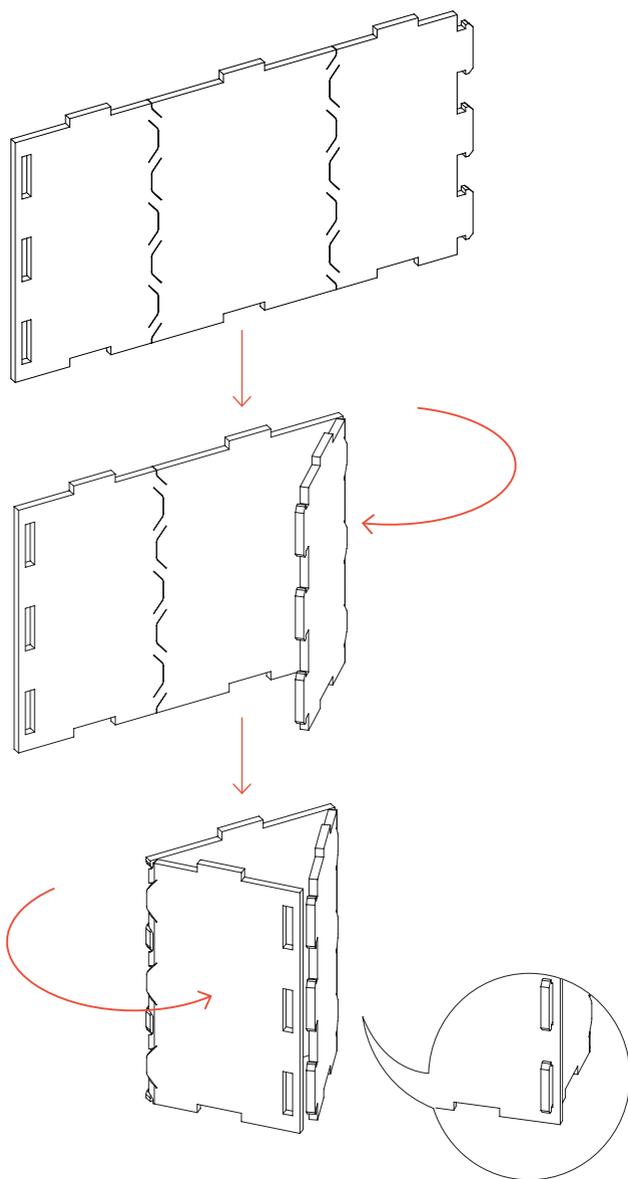

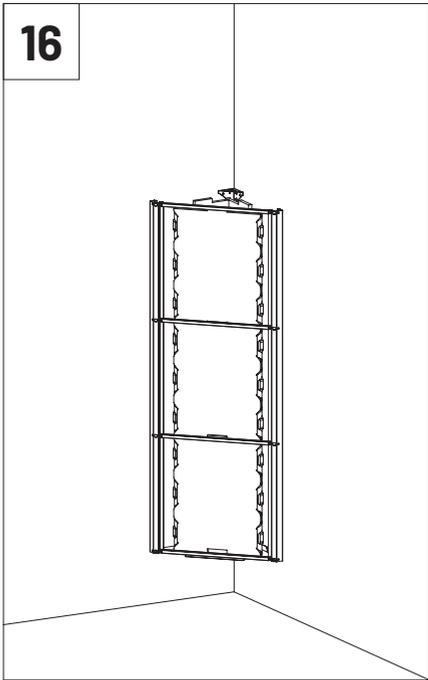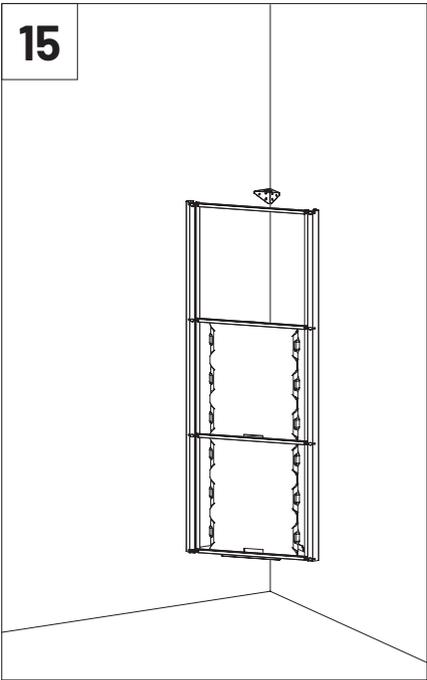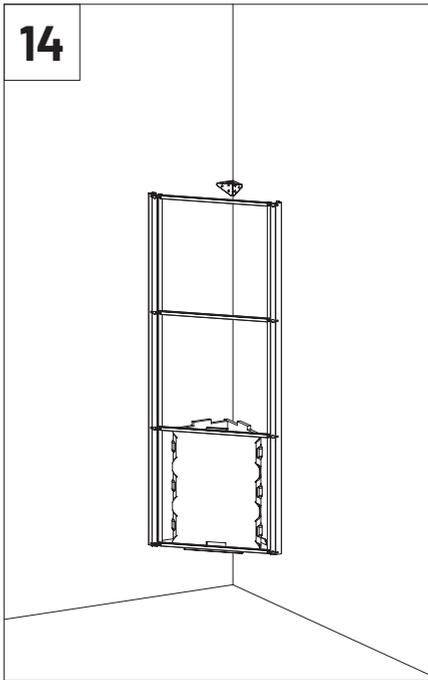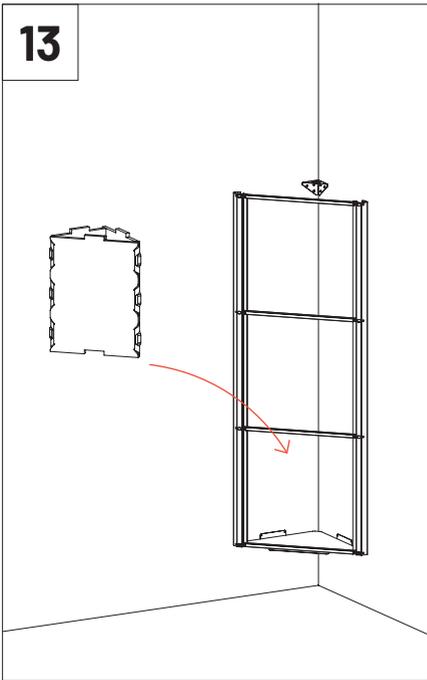


17


Install the VMT Panel.

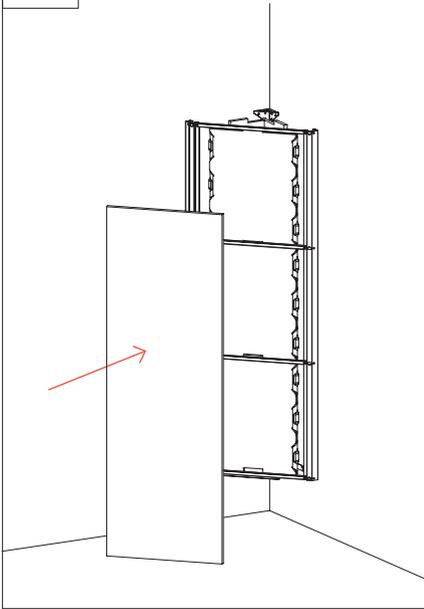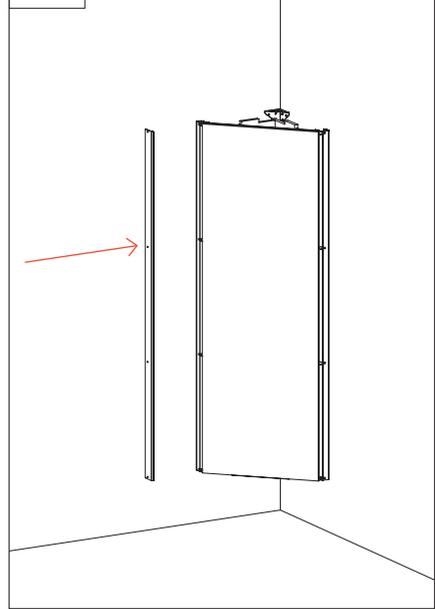**18****19**

Fix the finishing profiles with the painted screws supplied.

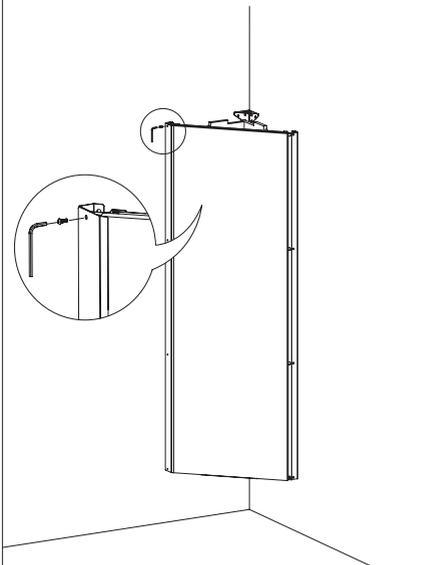**20**

Install the Bass Trap cover.

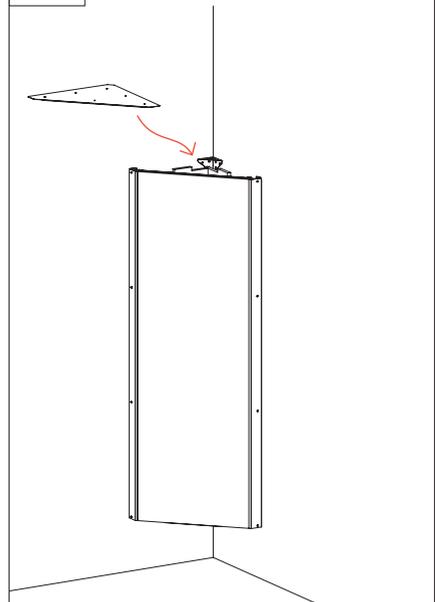

Main Office, R&D & Logistics

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2022 | V3

No parts of this document might be copied and/or published without written consent of Vicoustic.