



VicFix Metallic

Installation Manual

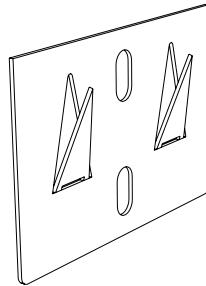

MATERIAL NEEDED

Included

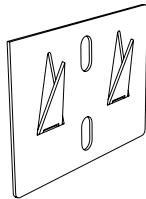


Metal Spike Part x 10



Screws (Flat head 3x20 mm) x20


Not Included



Level




Drill



Cutting Pliers


1

Make sure the spikes are forming a 45° angle with the metal piece itself.
Push them slightly out if needed.

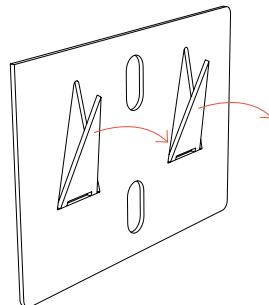


2

Screw in one spiked metal piece per each Vicoustic panel.

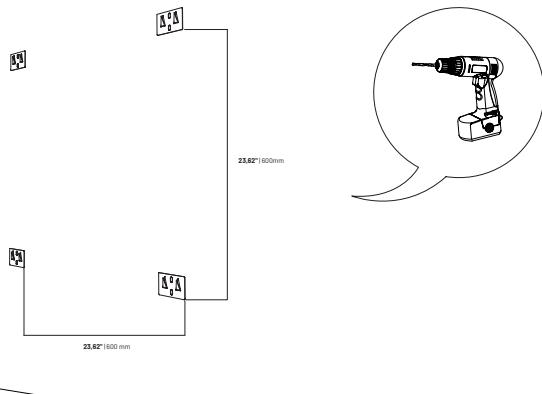**3**

Push your Vicoustic panel into the piece at a 45° angle for the best fit.

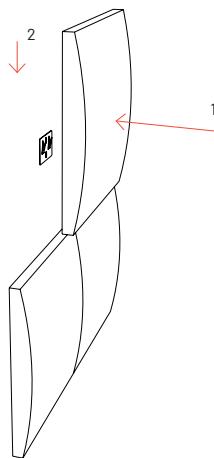**Main Office, R&D & Logistics**

Avenida do Pólo 3, N^o 159,
Carvalhosa 4590-137
Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N^o 16,
Armazém 9 2820-690
Charneca da Caparica, Portugal
T (+351) 212 964 100

VICOUSTIC
INNOVATIVE ACOUSTIC SOLUTIONS

Info and Sales

E sales@vicoustic.com

www.vicoustic.com