



Wavewood Diffuser Ultra MKII

Installation Manual

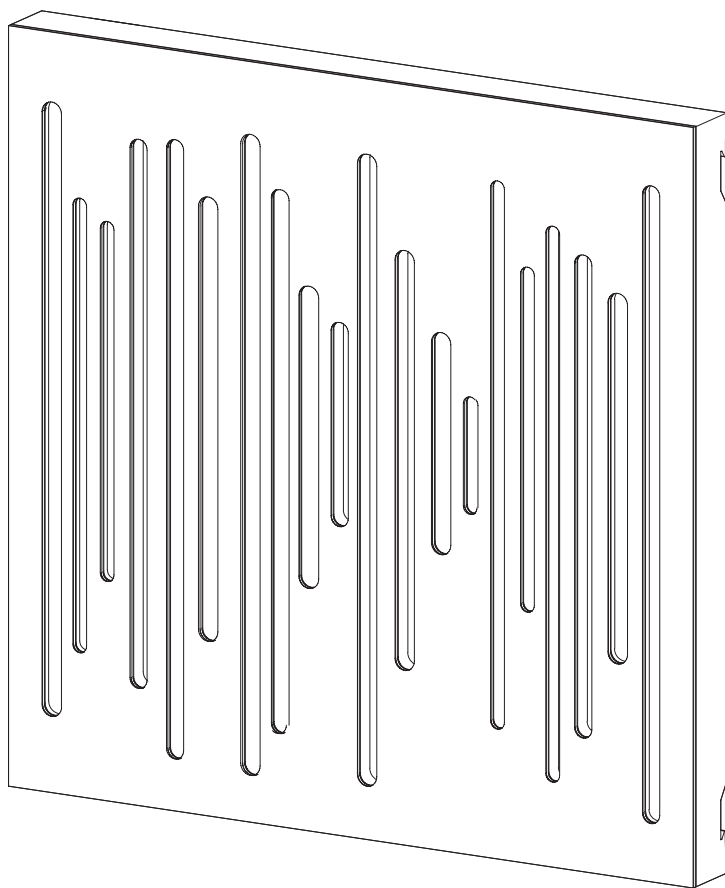


✓ MATERIAL NEEDED

Included

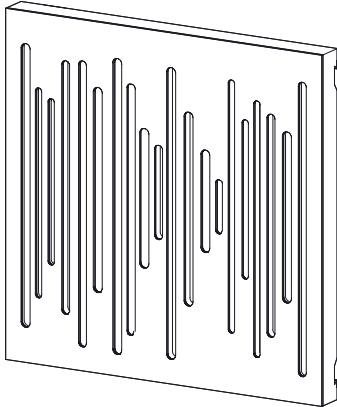

Wavewood Diffuser Ultra MKII




Silicone Drop



VicFix Mini

Not Included




Screwdriver



Measuring Tape




Wall Plugs and Screws



Level




Drill




Flexi Glue Ultra





This product can be installed on the wall with VicFix Mini and on the ceiling using Flexi Glue Ultra (not supplied).

Wall Installation

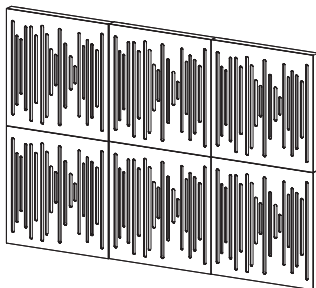

Ceiling Installation

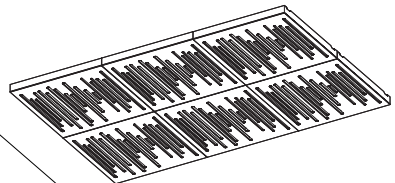

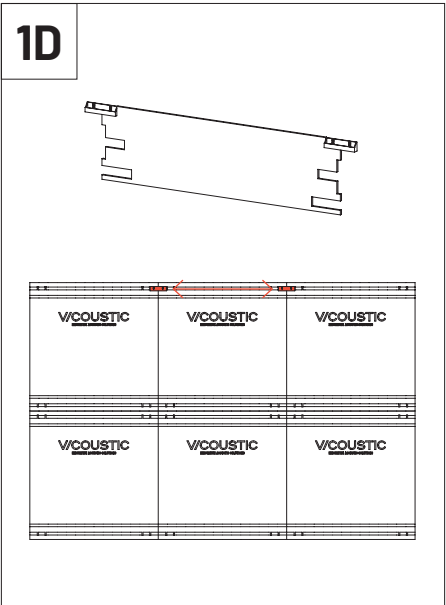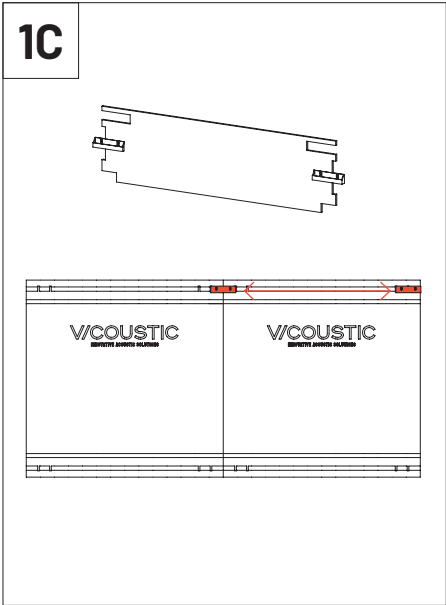
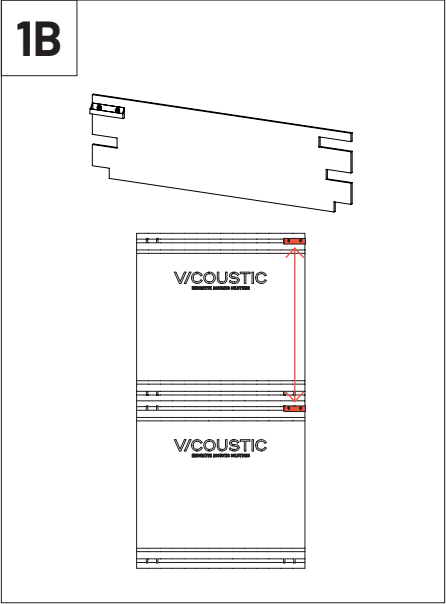
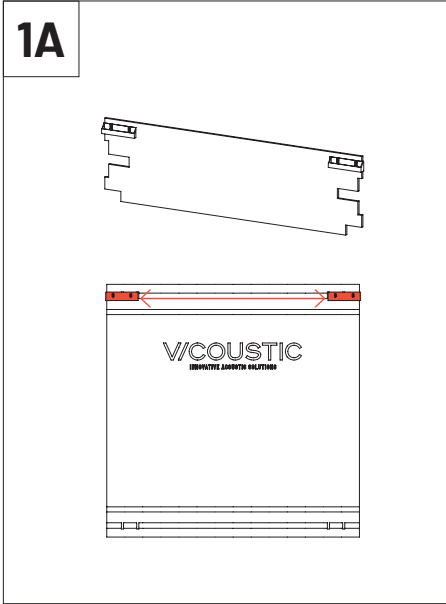


2

Wall installation - One panel




After defining the place where you want to install the panels, start marking the position of the Wavewood Diffuser Ultra MKII fixation clips.



! This product can also be installed using Flexi Glue Ultra.

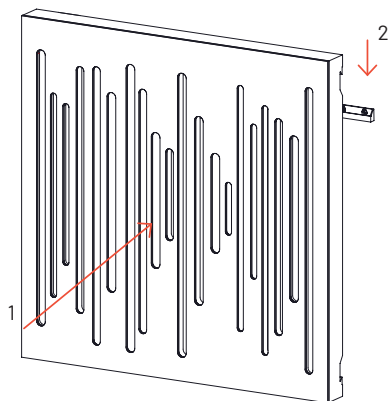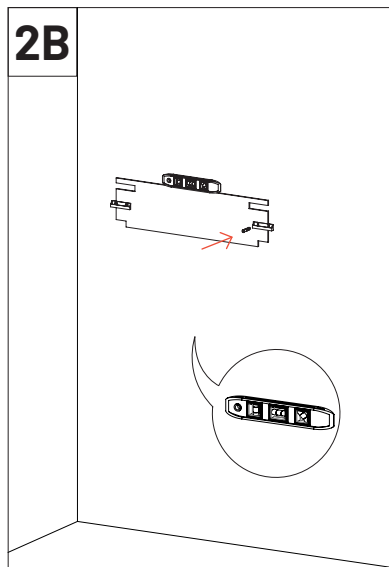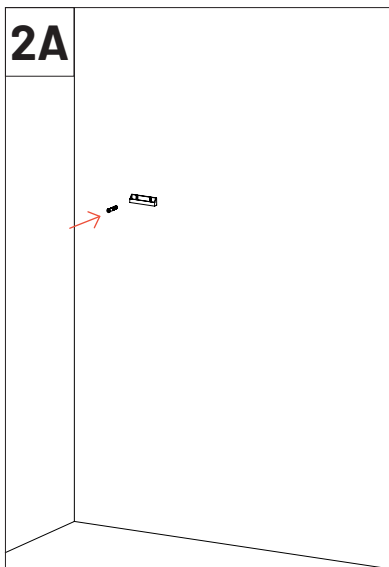

Wall installation - Installation up to three panels



Define the place where you want to install the panels and fix the First VicFix Mini. From there and with the help of the gauge provided, mark the positioning of the remaining fixation clips.

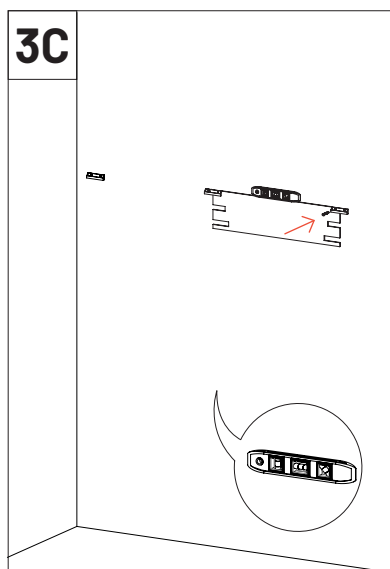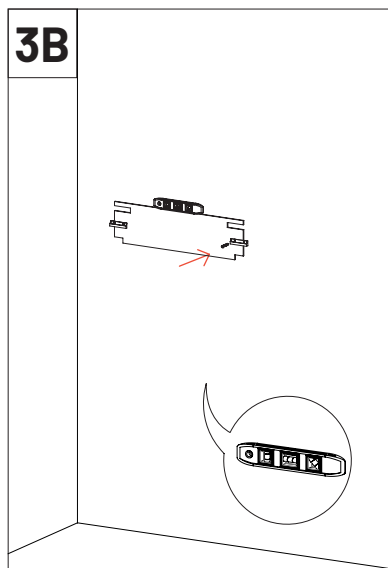
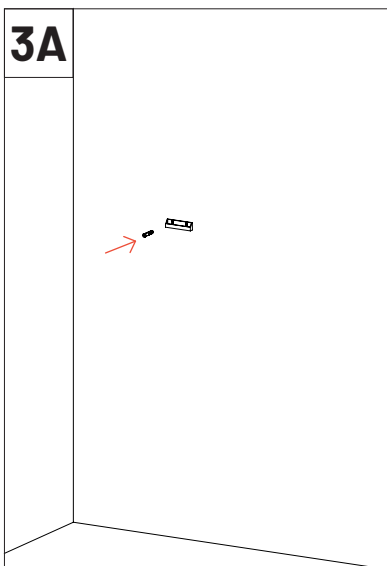


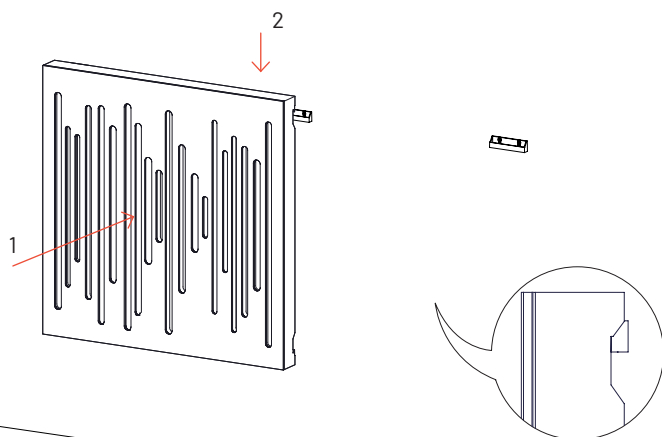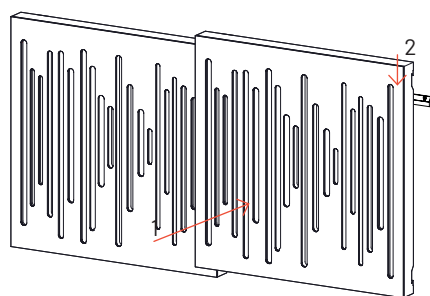3D**3E**

3F



To install the last Wavewood Diffuser Ultra MKII, use it to mark the inner side of the last fixing clip. Remove the last two panels again and use the gauge provided to ensure the clips are aligned. Fix the last clip. You can use a bubble level to help in this procedure.

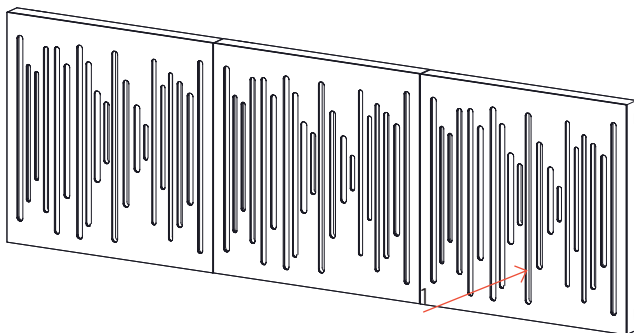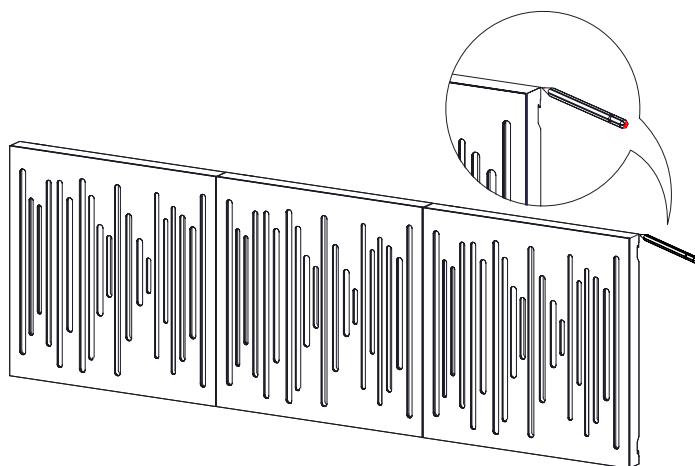**3G**

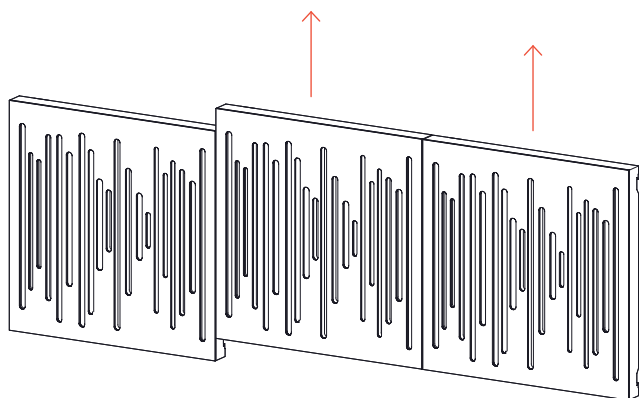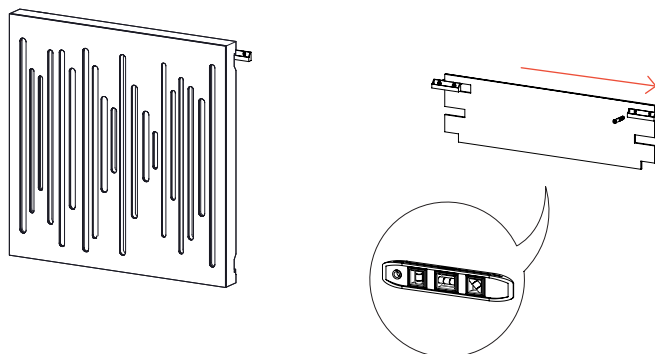3H**3I**

3J

Install the last two panels.

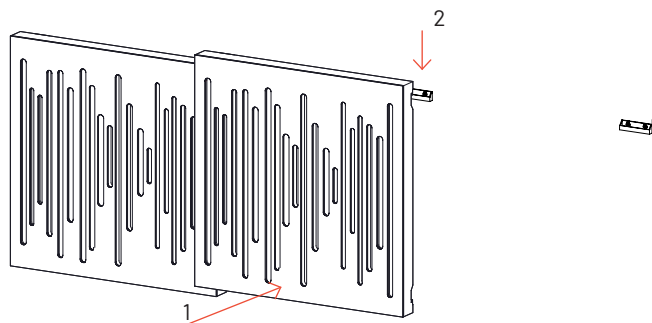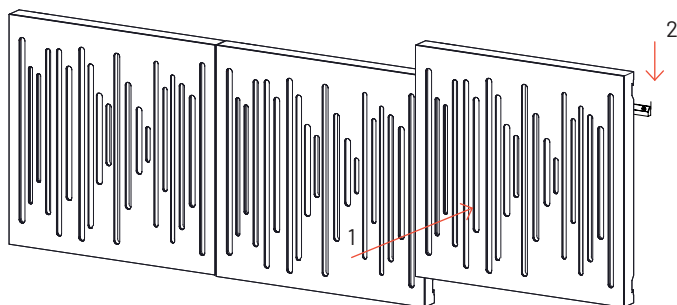
**3L**

4


Wall Installation - Vertical Installation

Install the first panel according to step number 2.

Follow the steps described in the following diagrams.

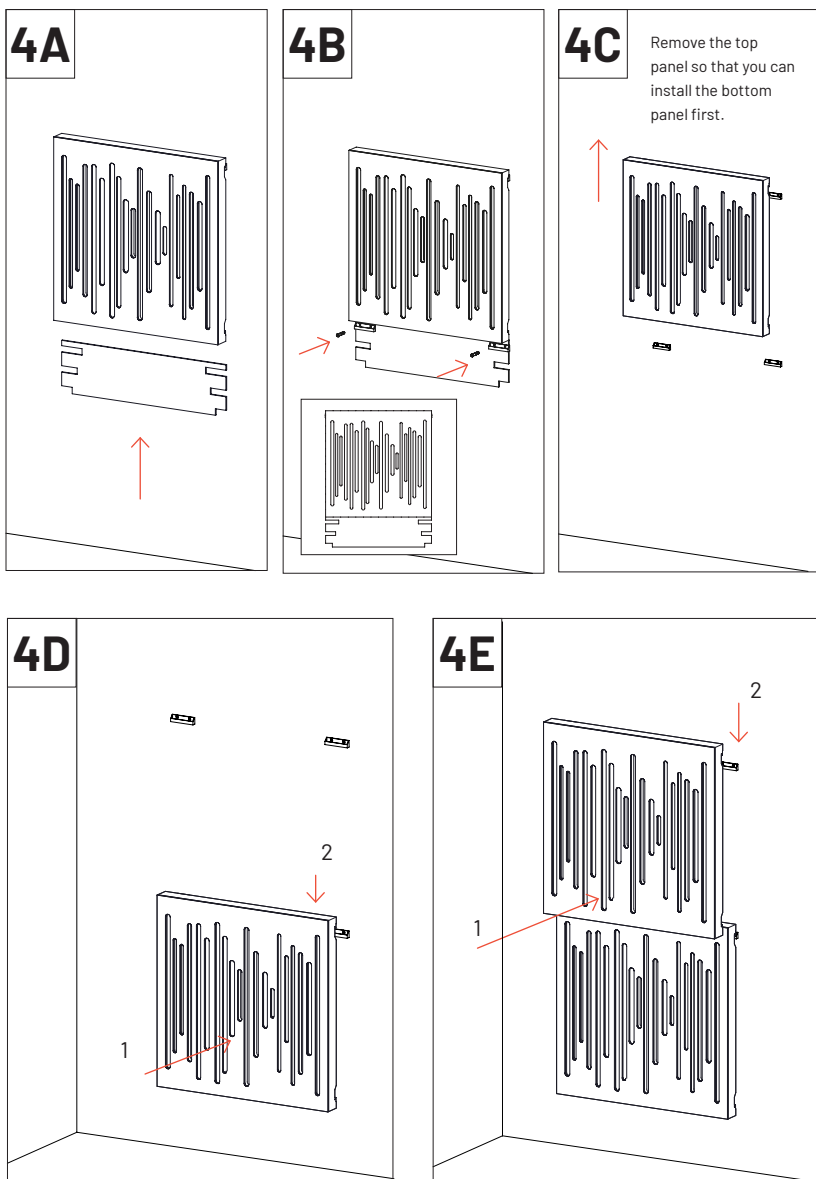


Ceilling Installation




If the nozzle is not already cut, cut it according to the diagram.

1

Apply three lines of glue on the back of the acoustic panel. Do not wait longer than 10 minutes after applying the glue to attach the panel to the wall.

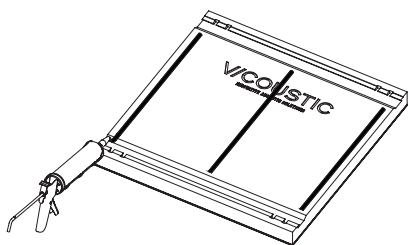**2**

Place the panel in the predefined position. Once in the desired place, press firmly against the wall for 15 seconds.

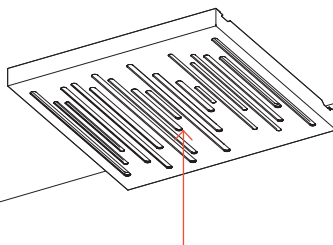

Use the same process to install the panels on the ceiling.

!

Always apply the glue in stripes. Do not apply the glue in dots. When applying the glue, position the nozzle tip pre-cutted at 45° angle, so that it applies some pressure on the glue against the back of the panel.

For ceiling panel installations, you may need to use ceiling supports to hold the panels in place while the glue dries.

To ensure that you maximise the strength of the glue, don't make any adjustments or remove the panel after bonding.

Wall and ceiling surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry. If you have unpainted gypsum board surfaces, these should be primed with a drywall primer (or another material manufactured especially for the purpose), to equalize the absorption between the gypsum board face paper, joint compound, and skin coating materials. You should then apply the paint, and allow air circulation in order to dry the paint within the time frame specified by the paint manufacturer. Please ensure the paint is dry before installing the acoustic panel. Make sure the room has all the necessary conditions to receive the acoustic panels. After you apply the glue on the back of each acoustic panel, please ensure you hold the acoustic panel against the wall the required time (mentioned above), and ensure it stays fixed in place. This method is also applicable to ceiling installations.

Main Office, R&D & Logistics

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com

