


Suspended Baffle SET 1


Installation Manual

EN

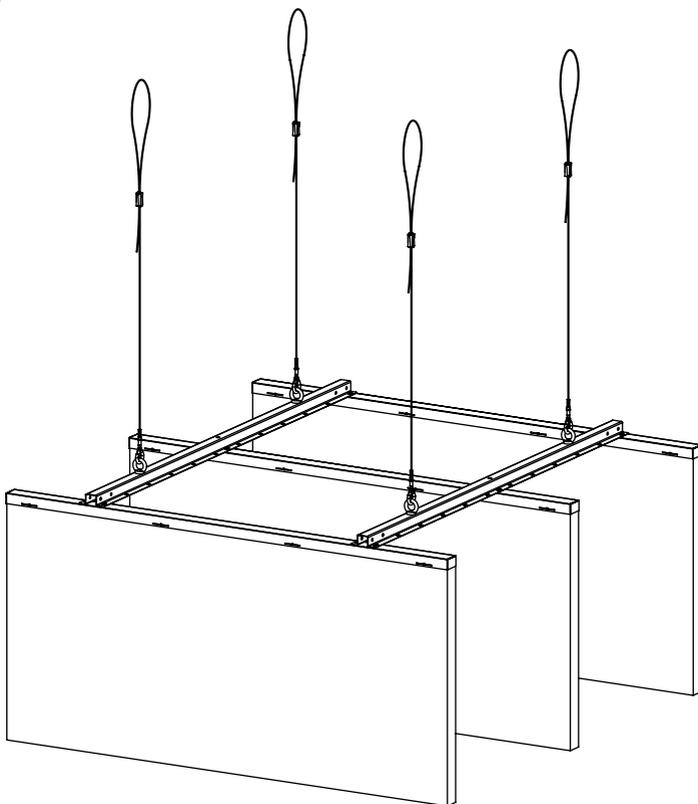

MATERIAL NEEDED


Included

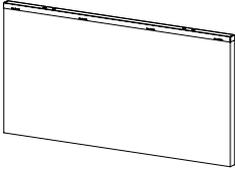

Suspended Baffle



Suspension Steel Cable

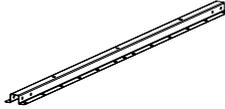

Suspension Profile



Eye Bolt / Nut



Screw / Washer



Stopper

Not Included



Level




Cutting Pliers



Drill



Wall Plugs and Screws

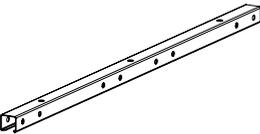

Suspended Baffle Set Connector




Key




4 mm

1

Please screw on the eyebolts as shown in the diagram. We suggest suspending the main profiles at a height slightly higher than the height of the baffles, to help attach them to the main profiles.

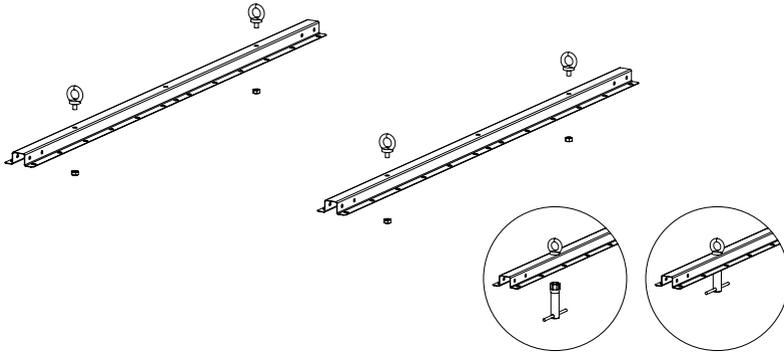


i




2

We suggest suspending the main profiles at a height slightly higher than the height of the baffles, to help attach them to the main profiles.




Attach the baffles to the holes indicated in the diagram.

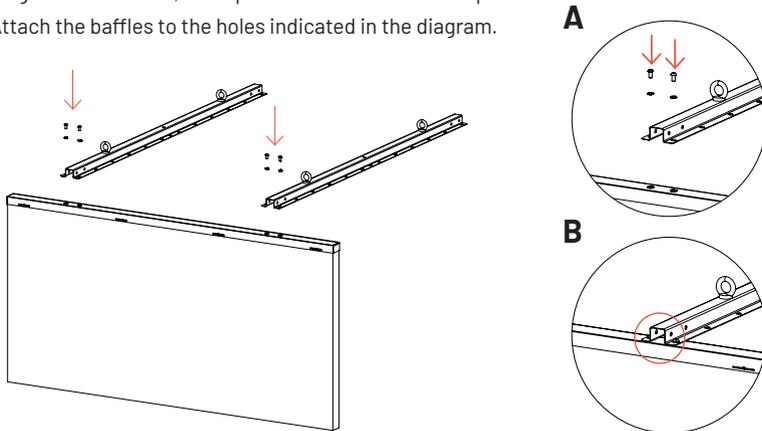

i






3

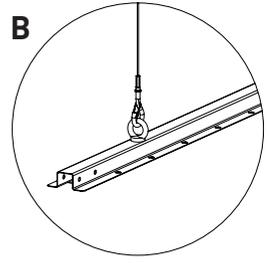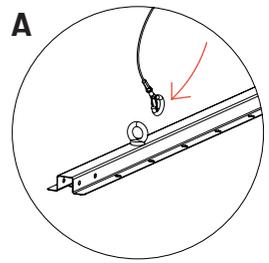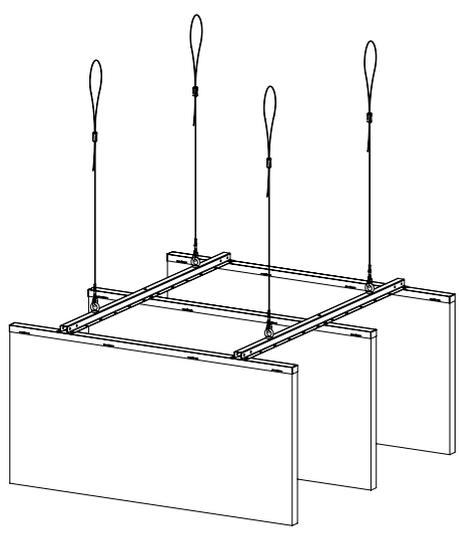

4


Insert the steel cables into the stoppers. Press the stopper adjustment pads to adjust the cables to the desired height.

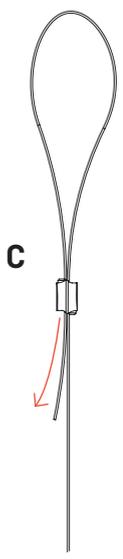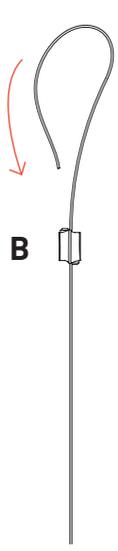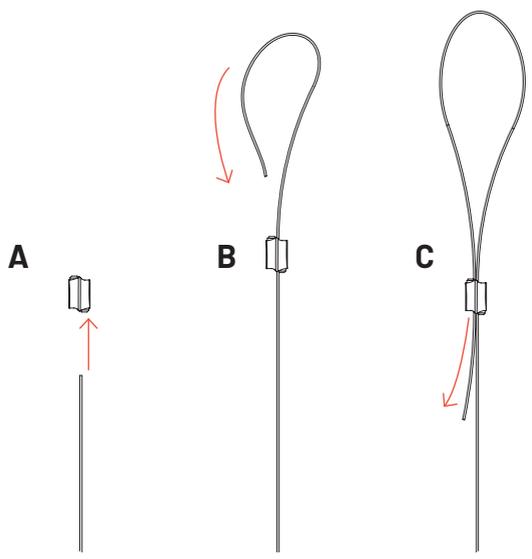


Two or more Sets

To connect two Baffle Sets, use the Suspension Baffle Set Connector (sold separately)

1

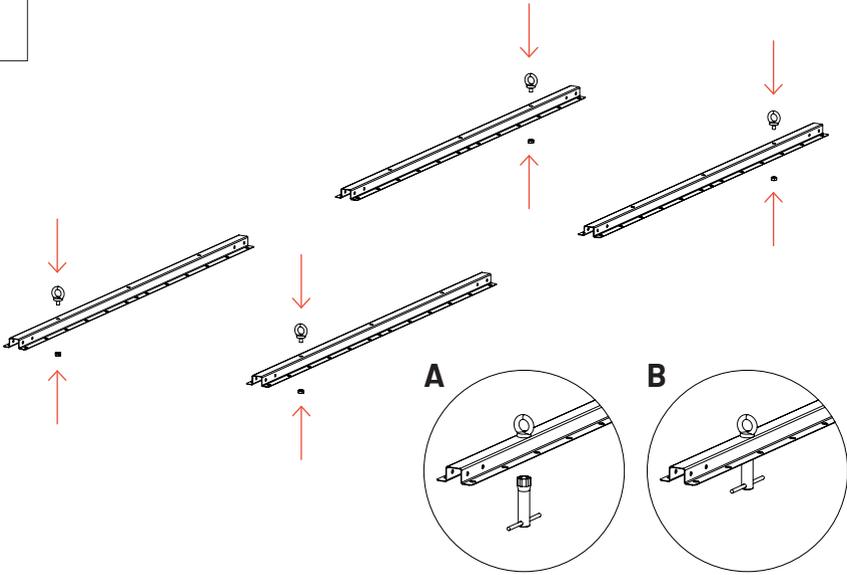


2

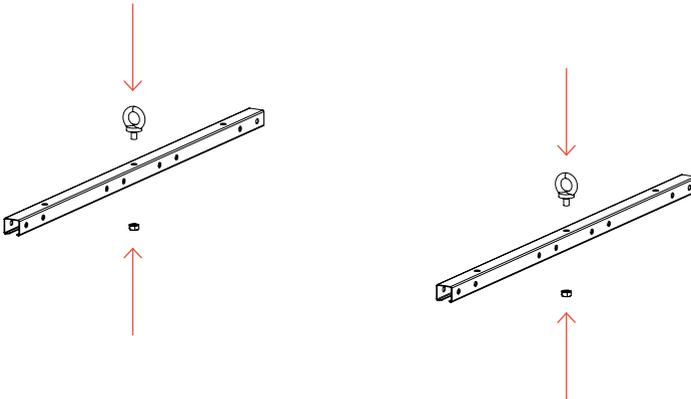


3

Use the screws and nuts supplied to connect the Baffle Set with the Suspension Baffle Set Connector.

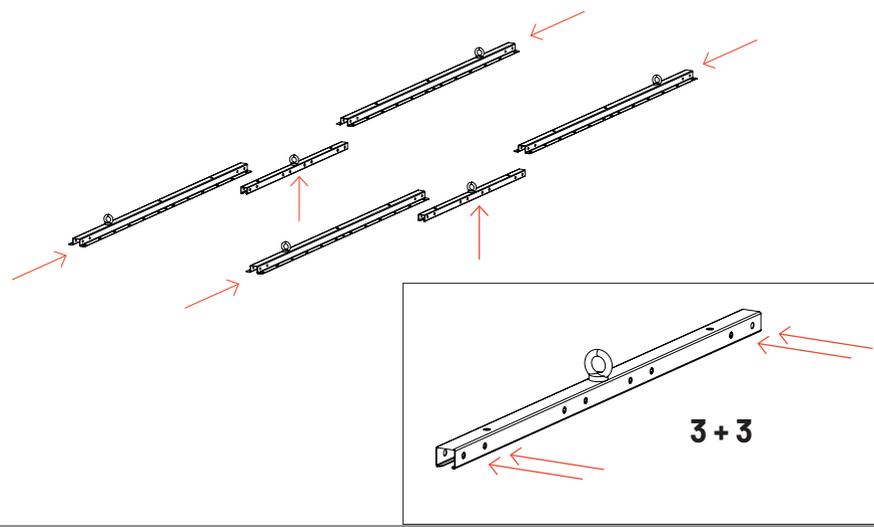


4


Pay attention to the correct spacing of the Baffle Set so that, once installed, all the baffles stand equidistant.

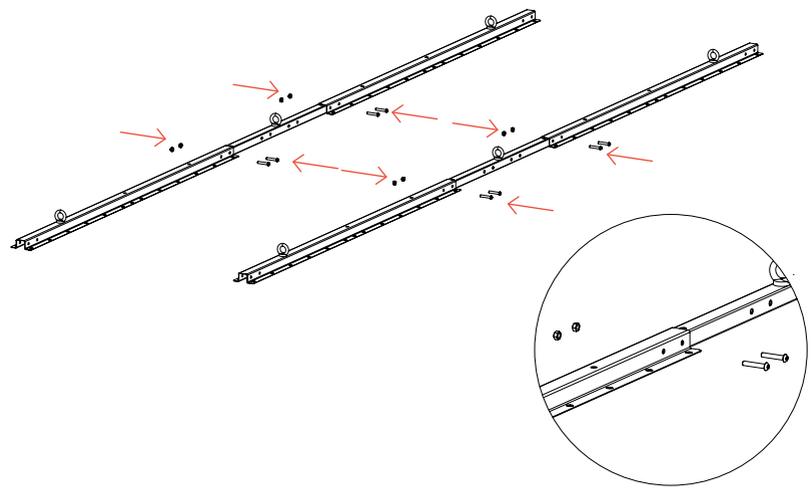

5

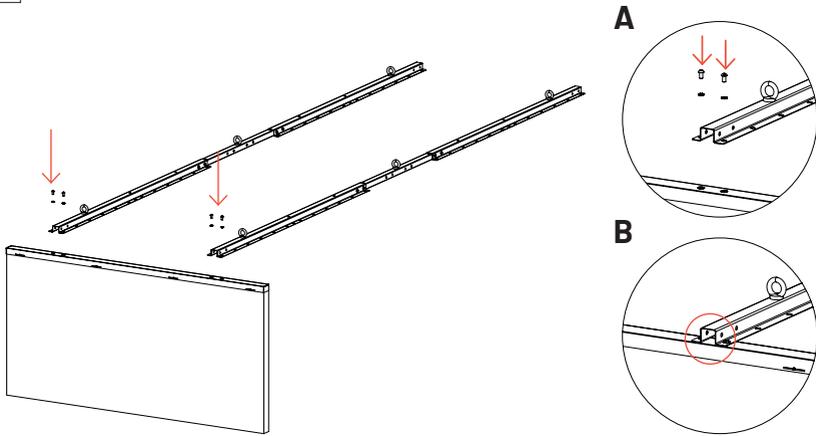


i

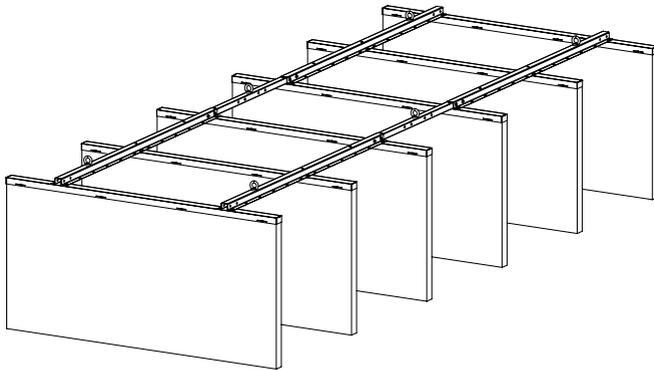



6

For suspension of 3+3 Baffle sets, we recommend 6 or 8 suspension cables.

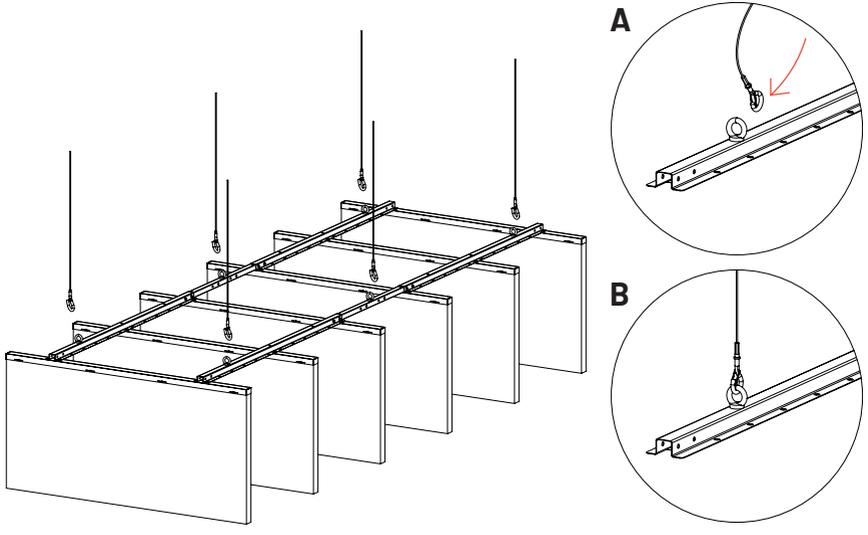

7

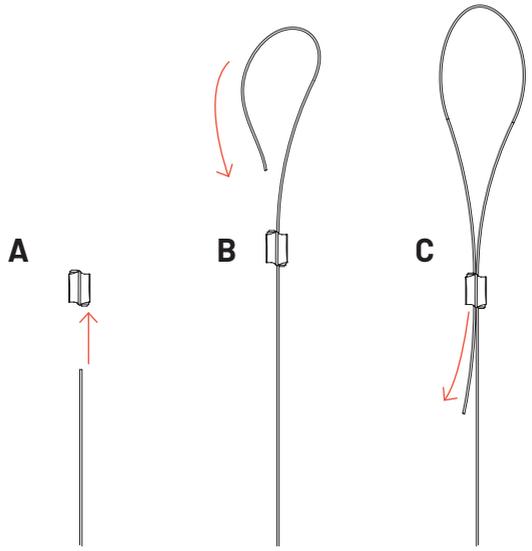

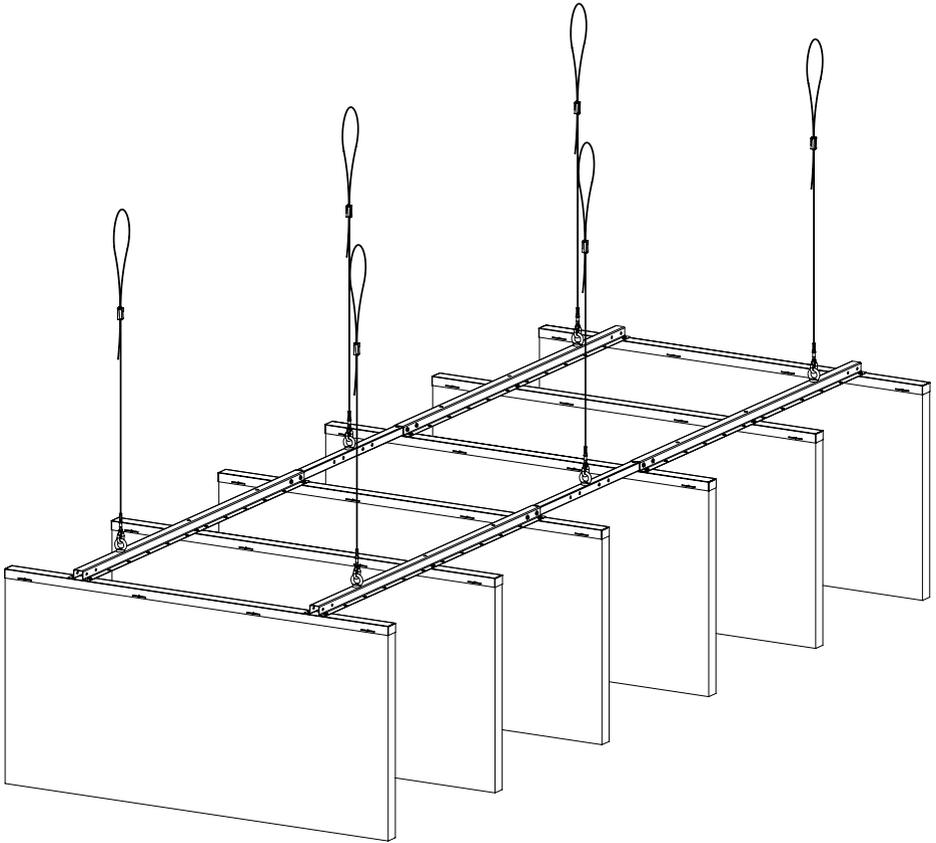

Main Office, R&D & Logistics
Rua do Polo 3
4590-335 Freamunde, Paços de Ferreira,
Portugal
T (+351) 255 136 746

Office
Rua Quinta do Bom Retiro N° 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales
E sales@vicoustic.com

www.vicoustic.com

V//COUSTIC
INNOVATIVE ACOUSTIC SOLUTIONS

© Vicoustic, 2024 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.